




PRODUCT DATA SHEET

Stainless Steel Lifting Eyes



MADE IN THE U.S.A.

1.0 Dimensions (inches)

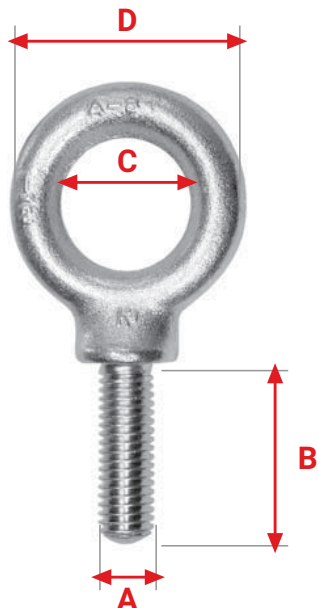

- 304 stainless steel, shoulder pattern forged eyebolts for wet, washdown, marine and food-processing environments.
- Drop forged, passivated & electropolished; ASTM A193 Grade B8.
- UNC-2A coarse thread.
- Shoulder seats flush against the work – required for any angular lift.


Nutty Stock No.	A Thread UNC-2A	B Shank Length	C Eye I.D.	D Eye O.D.	Weight (lbs.)
XLES1420	1/4-20	1"	3/4"	1-3/16"	0.06
XLES51618	5/16-18	1-1/8"	7/8"	1-7/16"	0.11
XLES3816	3/8-16	1-1/4"	1"	1-21/32"	0.20
XLES1213	1/2-13	1-1/2"	1-3/16"	2-1/16"	0.42
XLES5811	5/8-11	1-3/4"	1-3/8"	2-1/2"	0.70
XLES3410	3/4-10	2"	1-1/2"	2-13/16"	1.08
XLES789	7/8-9	2-1/4"	1-11/16"	3-1/4"	1.70
XLES18	1-8	2-1/2"	1-13/16"	3-9/16"	2.46

2.0 Material Data

Property	304 Stainless Lifting Eyes
Material	Drop forged 304 stainless steel (18-8)
Specification	ASTM A193 Grade B8 (Class 1)
Finish	Passivated & electropolished
Tensile strength	75,000 psi min
Yield strength	30,000 psi min
Elongation	30% min
Reduction of area	50% min
Hardness	223 HB max
Thread	UNC-2A
Pattern	Shoulder
Origin	Made in the U.S.A.

Mechanical properties are ASTM A193 Grade B8 Class 1 minimums.

3.0 Angle of Pull

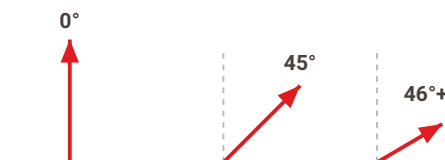

Angle of pull is measured from the axis of the shank. Angular lifts significantly reduce rated capacity; beyond 45° eyebolts are not rated – use safety swivel hoist rings. Contact Nutty for stainless rated capacities.

4.0 Application & Installation

- The receiving hole should be counter-sunk and be free and clear of any debris to assure proper seating.
- LOADS SHOULD ALWAYS BE ALIGNED TO THE PLANE OF THE EYE, not at an angle to the plane. A steel washer or spacer may be used in conjunction with Shoulder Eyebolts to attain proper load alignment. The thickness of the steel washer or spacer must not exceed one thread pitch.
- Angular lifting should be avoided. Angular lifts significantly reduce rated capacities (see Rated Capacities table).
- Check seating after applying an angular lift since the initial lift may cause the bolt to back away from the load. If such occurs, the Eyebolt should be unloaded & properly resealed.
- For applications with untapped through-holes, longer length Shoulder Eyebolts are recommended, using a steel washer and nut for the required thread length of engagement.
- Shoulder Eyebolt tapped holes are to have a threaded length which allows for full length of shank engagement and clearance for the unthreaded portion of shank.
- Shoulder Eyebolts must be firmly seated and flush against the mating surface; otherwise, the rated capacity is reduced significantly. The use of a steel washer or spacer is permissible and may be required; however, the thickness must not exceed one thread pitch.

5.0 Inspection & Maintenance

- Eyebolts should be inspected and installed by a competent person who is knowledgeable about the application and installation of Eyebolts.
- Each Eyebolt must be completely inspected BEFORE each use for possible defects such as: distortion, bent shank/threads, or incomplete/incorrectly formed threads. Periodic inspection of Eyebolts is highly recommended.
- Eyebolts should not be painted or otherwise coated when used for lifting; such coatings make it difficult to inspect for defects or wear indicators.
- Eyebolts should not be left where they can incur mechanical damage or corrosion.
- Destroy Eyebolts when signs of bend, elongation, wear or damage are visible. Such signs indicate that the Eyebolt has been stressed (overloaded) beyond rated capacity. Never attempt to repair a stressed Eyebolt.
- Destroy Eyebolts when they show any signs of alteration. Signs include: gouging, undercutting, welding, etc.
- Proper destruction of an Eyebolt: crushing or cutting clear across the eye of the Eyebolt.

6.0 Safety Precautions

- DO NOT work, stand or crawl around the load of the Eyebolt. Ensure a safe distance from the load.
- DO NOT use wrenches, crowbars, etc. to tighten Eyebolts. Hand tightening is recommended.
- DO NOT use a single Eyebolt to lift a load that can rotate. Safety Swivel Hoist Rings are recommended for such loads.
- DO NOT force hooks or any other fittings into the eye; they must fit freely.
- DO NOT exceed the Rated Capacity.
- DO NOT SHOCK LOAD EYEBOLTS. Gradually increase lifting of the load to minimize load-shock.
- DO NOT weld Eyebolts, or perform any weld-repair on Eyebolts.
- DO NOT machine Eyebolts on the shank or shoulder to achieve proper seating.
- DO NOT expose Eyebolts to extreme environmental conditions, as they may adversely affect the Rated Capacity.

Disclaimer: The above is a compilation of data from various industry standards. The Nutty Company, Inc. has made every effort to present the data accurately. However, The Nutty Company, Inc. cannot be held liable for any claim traceable to any errors, typographical or otherwise, contained herein.



Need a size, thread or length you don't see?

Call 203.877.1709 or email sales@nutty.com – shop online at nutty.com