
THE NUTTY COMPANY INC
FASTENER SPECIALISTS SINCE 1977

19 Seemans Lane • Milford, CT 06460 USA
203.877.1709 • 1.800.4NUTTY.1 • Fax 203.735.1097
sales@nutty.com • www.nutty.com

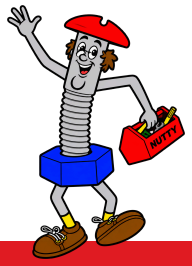


PRODUCT DATA SHEET

316 Stainless Steel Spring Snap Hooks

1.0 Dimensions & Working Load Limits (inches)



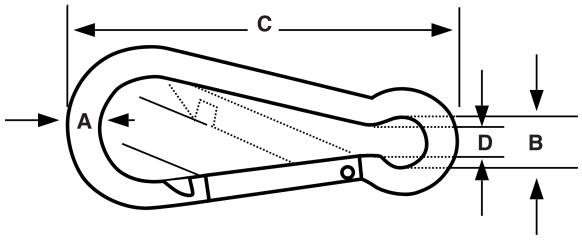

- **Type 316 stainless steel** – marine grade, excellent resistance to salt water and chemicals.
- Will not rust like plated steel – the best choice for salt water and wet areas.
- Spring-loaded gate snaps shut by itself – clip on and off in seconds, no tools.
- Fixed eye for rope, chain or a shackle.
- WLL from **120 lbs. (3/16") to 900 lbs. (1/2")**.
- **Not for overhead lifting.**

A size (wire diameter) **B** eye outside **C** overall length **D** eye inside **Gate opening** = spring gate clearance

Stock No.	A Size	WLL (lbs.)*	B Eye Outside	C Overall Length	D Eye Inside	Gate Opening	Weight (lbs.)
XSPRH316	3/16"	120	0.32	2.00	0.25	0.25	0.04
XSPRH14	1/4"	180	0.36	2.38	0.27	0.31	0.06
XSPRH516	5/16"	280	0.48	3.13	0.38	0.38	0.15
XSPRH38	3/8"	400	0.63	3.88	0.54	0.56	0.27
XSPRH716	7/16"	550	0.75	4.63	0.65	0.69	0.42
XSPRH12	1/2"	900	0.90	6.25	0.95	1.00	0.78

Dimensions are nominal, in inches. Size = wire diameter. Weight is approximate, in lbs. each. *Working Load Limit is for in-line (straight) pulls with the gate closed. Not for overhead lifting.

2.0 Material & Finish

Property	316 Stainless Steel Spring Snap Hooks
Type	Spring snap hook (fireman / carabiner style) with spring-loaded gate
Material	Type 316 stainless steel
Finish	Bright / natural stainless
Closure	Spring-loaded gate, closes automatically
Sizes	3/16" to 1/2"
Load	In-line pull on the eye and hook body

3.0 Common Uses

- Boat lines, fenders and dock lines
- Marine and dock hardware
- Pet leashes and tie-outs
- Gates, chains and covers outdoors
- Food, chemical and wash-down areas

4.0 Application & Installation

- Pick a snap hook with a **WLL at or above** your load.
- Make sure the gate opening fits over your chain link, ring or fitting.
- Press the gate in, clip the hook on, and let the gate snap fully closed.
- Load the hook along its length, eye to hook. Never load the gate or side load the hook.
- Tie or splice rope through the eye; do not run rope over a sharp edge.

5.0 Inspection & Safety

- Never exceed the Working Load Limit. Do not shock load.
- **Not for overhead lifting.** Use rated alloy lifting hardware for lifting.
- Inspect before each use: do not use a hook that is bent, cracked, worn, or has a weak or broken spring.
- The gate must be fully closed before loading.
- Do not weld, heat or modify snap hooks.
- Do not use for lifting people or fall protection.

Disclaimer: The above is a compilation of data from various industry standards. The Nutty Company, Inc. has made every effort to present the data accurately. However, The Nutty Company, Inc. cannot be held liable for any claim traceable to any errors, typographical or otherwise, contained herein.



Need a size, thread or length you don't see?
Call 203.877.1709 or email sales@nutty.com – shop online at nutty.com